

TO START USING THE DEVICE

Revision 1.10

1

Connect the device to the Ethernet switch. If the switch has no POE option, connect the power 12-24 VDC to the power terminals.



2

Set the network settings of your computer of 10.0.1.0/24 range:

- Fixed IP address: 10.0.1.10
- Subnet mask: 255.255.255.0

3


Enter the address **10.0.1.101** in the address bar of your browser. You will see the device homepage.

4

Enter **Login/Password** (by default: root/root)

5

Choose the **Settings** menu:

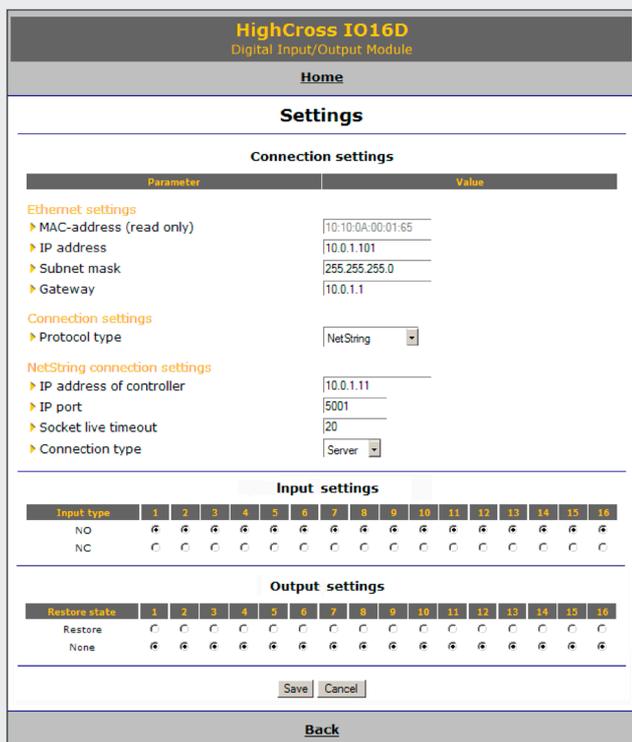

6

Set the desired IP address in **Ethernet settings section**.

7

Set the desired IP port in **NetString connection settings** (default is 2001).

8

Choose the protocol:

- **NetString** – Telnet-like plain text protocol (see NetString manual)
- **Modbus** – to use the device with industrial PLC.

9

Choose the connection type **Server** to work with any client software (like Telnet, Demopad, iRidium mobile, etc.).

10

Save the current configuration.

The device will reboot automatically and will be ready to be connected to your local network.

Do not forget to return your computer to the previous configuration of network settings.

To reboot the device, press the **reset** button shortly. To reset all the settings, press the **reset** button for 5 seconds.

For further information refer to www.highcross.pro